



# Glass Heater

## 25W 55W 100W 150W

### Hints & Tips for Best Results

- Never remove the heater from the terrarium when it is turned on.
- Once installed, allow 10 to 15 min before turning the heater on, and allow the same amount of time before removing the heater from the terrarium.

### Trouble Shooting

#### HEATER DOES NOT WORK

1. Ensure the plug is inserted correctly and the switch is in the “on” position.

#### THE LED IS WORKING, BUT THE HEATER IS NOT HEATING THE TERRARIUM

1. Check that the control knob is set on the desired temperature.
2. Double check the thermometer. Use a second one.
3. Ensure the thermometer is not near the heater. Relocate the thermometer to the opposite end of the terrarium.
4. Return the unit to the place of purchase for further inspection.

#### THERE IS WATER INSIDE THE HEATER

1. Turn the power “off” at the main power supply, unplug the unit and remove it from the terrarium. If the unit is still under guarantee return it to the place of purchase for further inspection, Otherwise cut the cord and dispose of sensibly.