





**Next Best Thing to Nature!**

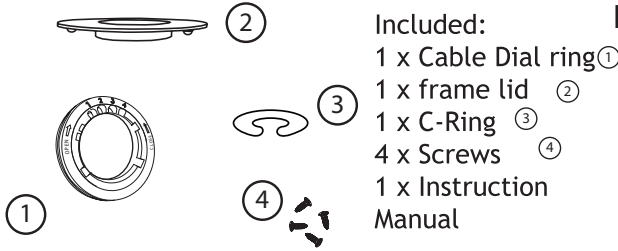

- Included:  
 1 x Cable Dial ring<sup>①</sup>  
 1 x frame lid <sup>②</sup>  
 1 x C-Ring <sup>③</sup>  
 4 x Screws <sup>④</sup>  
 1 x Instruction Manual

## For Screen Top Enclosures and Terrariums

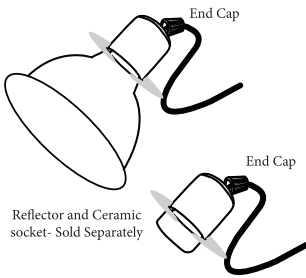


**Diagram A**

Locking ring Cable Dial ring Cable Dial



Complete Cable Entry Dial Assembly - Supplied with Reptile One Enclosures


- (Reptile One ONLY) Remove the complete cable entry dial assembly on your Reptile One Enclosure. The locking ring and Cable Dial are not required for this assembly. (Diagram A)
- Carefully make a hole in your mesh enclosure lid around 70mm dia. (Refer to template on back of page)
- Unscrew the end cap on the ceramic socket.
- Then carefully unscrew the ceramic socket around **5 mm** opening (**2 Turns**).
- (Reflector ONLY) Feed the Reflector power cable and socket through frame lid.

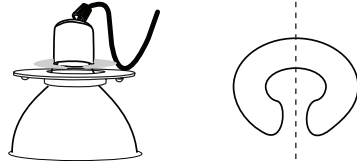


- (Reflector ONLY) Use a strong pair of scissors cut the C-ring in half.
- Place the C-Ring around the bottom of the screw thread, then tighten the ceramic socket and end cap.

**Diagram B**

Ceramic Socket -Sold Separately

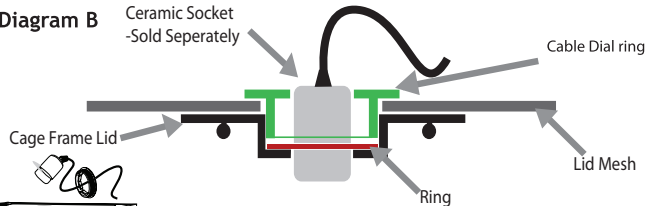


**Diagram C**

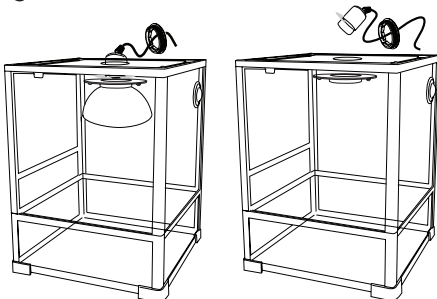


- Assemble and attach the ceramic socket to the enclosure as shown in Diagrams B & C.

- Thread the plug back through the Cable Dial Ring to screw the dial ring the frame lid.

# For Wooden Top Enclosures and Terrariums

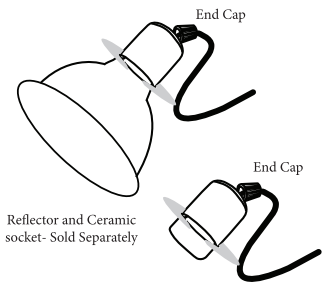

1. Carefully make a hole in your Wooden enclosure lid around 70mm dia. (Refer to template below)
2. Secure the Cage frame lid to the enclosure using the screws provided.

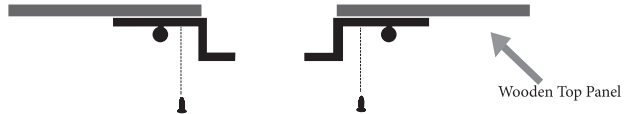

3. Unscrew the end cap on the ceramic socket.


4. Then carefully unscrew the ceramic socket around **5 mm** opening (**2 Turns**).

5. (Reflector ONLY) Feed the Reflector power cable and socket through lamp holder and enclosure lid from the underside.



6. (Reflector ONLY) Use a strong pair of scissors cut the C-ring in half.

7. Place the C-Ring around the bottom of the screw thread, then tighten the ceramic socket and end cap.

8. Assemble the ceramic socket with the cage as per diagram below.

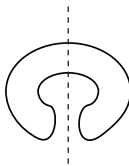

Reflector/Ceramic Socket  
-Sold Separately

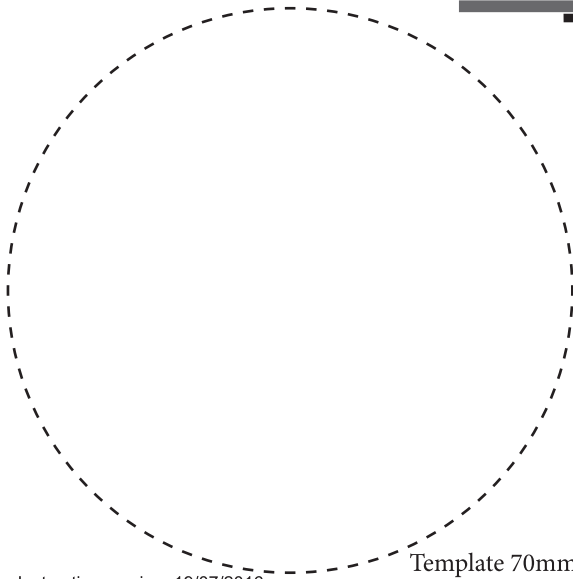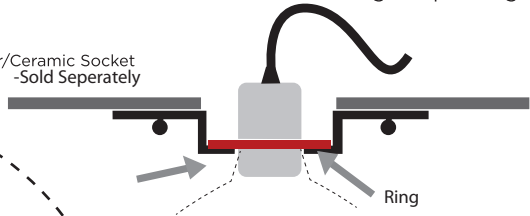

Template 70mm Dia. Hole

Instruction version: 19/07/2016



**Reptile One™**

**Next Best Thing to Nature!**

Manufactured in China

Reptile One and Reptile One Next Best Thing to Nature! are registered trademark or trademarks.



[www.reptileone.com.au](http://www.reptileone.com.au)

[www.reptileone.com.au](http://www.reptileone.com.au)